



Jeans Button

Jeans button is mainly used for thick clothes, such as overalls, jeans, denim jackets, etc. The antique brass jeans button is suitable for retro clothes, and the silver jeans button with classic pattern, suitable for women and children's clothes.

